

## NXP-RM-DANTE / NXP-RM-DANTE-PI

**\*DISCONTINUED\***

XIRIUM PRO US Receiver RX Digital DANTE Output Module, including NKXPF-5-15-3



### Input and output module options handle common signal type

Whether the signal type is analog, digital (AES/EBU) or Dante, XIRIUM PRO offers modules to accept any of them. Signal types may also be converted from one type to another, simply by selecting the appropriate module. Need to transmit an analog signal and plug into a digital input? No problem. Select an analog input module for the transmitter, and the AES digital output module for the receiver. In fact, every receiver in a system can use a different output module, allowing for signal conversion to the type used by your device.

NXP2TX



NXP-TM-ANA



NXP-TM-AES



NXP-TM-DANTE



NXP-TM-\*



NXP2RX



NXP-RM-ANA



NXP-RM-AES



NXP-RM-DANTE



NXP-RM-RP



NXP-RM-\*

