




# ASSEMBLY INSTRUCTION

## NP2X-AU-SILENT | 1/4" Professional Phone Plug

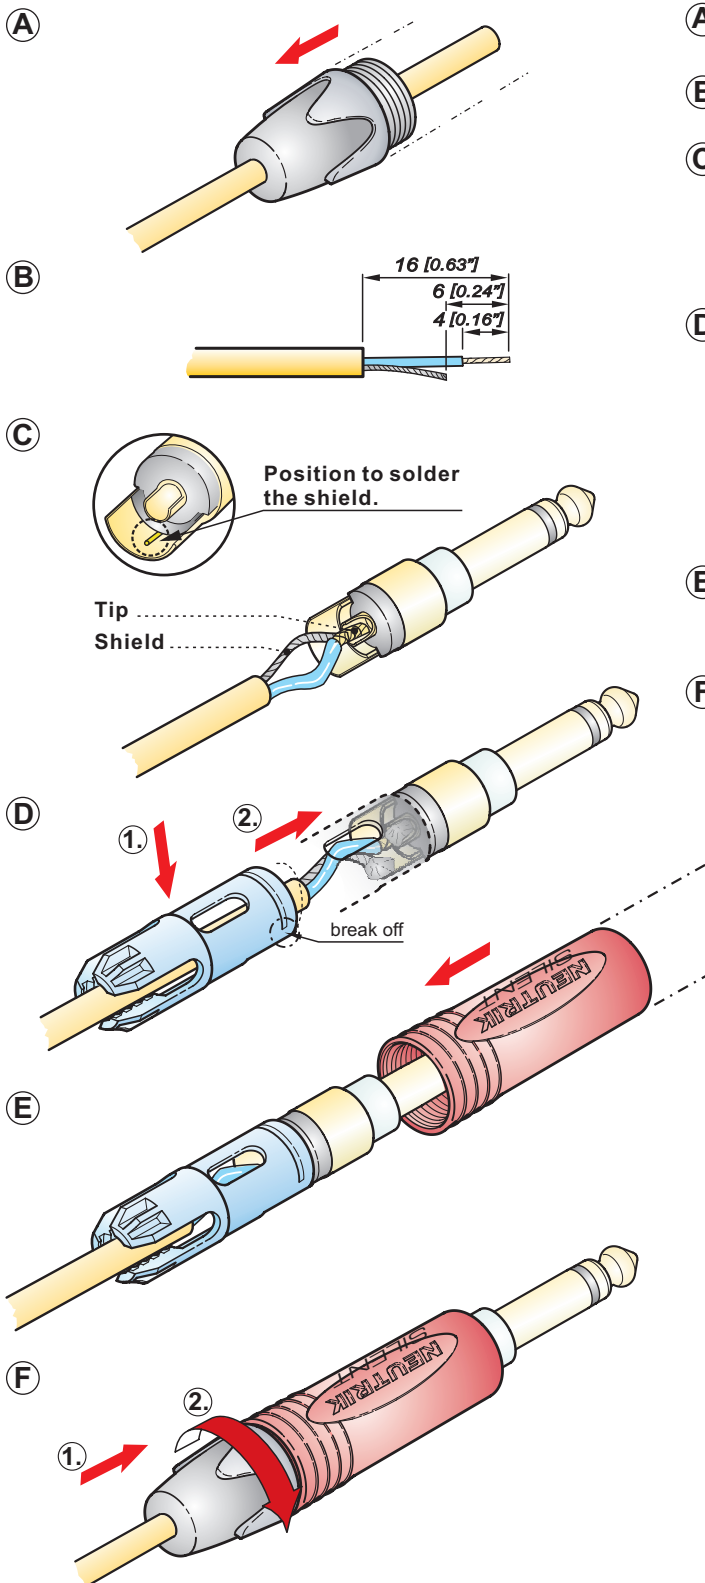

**A** Slide the boot onto the cable.

**B** Prepare cable as shown.

**C** Solder the wire ends.

**Attention:**

Solder shield to marked position.

**D** Position the chuck onto the cable and align chuck with plugfinger.

**Attention:**

If using a cable with O.D. > 5.50 mm [0.216"] break away this part of the chuck.

**E** Slide the housing onto the plugfingers with the chuck.

**F** Finish the installation by tighten the bushing onto the connector.

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
NEUTRIK Zürich AG CH T: +41 44 / 736 5010 F: +41 44 / 736 5011  
NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608  
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439

NEUTRIK Vertriebs GmbH DE/NL/AT T: +49 8131 / 280 890 F: +49 8131 / 280 830  
NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 218-0 / 3102M1641 | Update: 06.03.2008 | Data subject to change without prior notice. ©2008NEUTRIK®. ALL RIGHTS RESERVED.

[www.neutrik.com](http://www.neutrik.com)

**NEUTRIK**