





ASSEMBLY INSTRUCTION


nanoCON® | Receptacle NR3F-S & NR3M-S

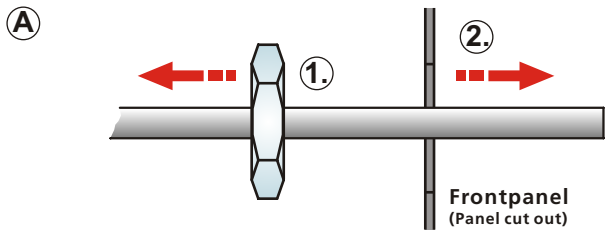

- (A)** 1. Slide the nut over the cable.
- 2. Pull the cable from the back through the panel cut out.

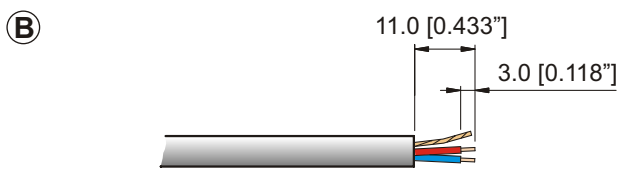

- (B)** Prepare cable as shown.

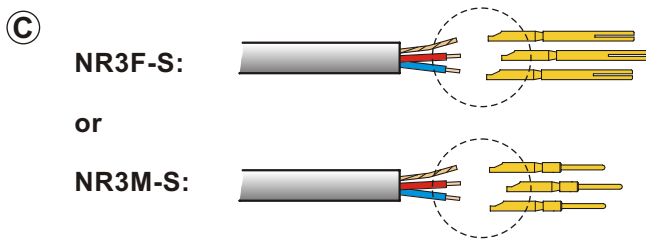


- (C)** Insert wires into the contacts and solder them.


- (D)** Push the contacts into the insert until you hear a snap.

- (E)** Put the receptacle onto the panel cut out.

- (F)** Sliding the nut on the housing and fasten it.

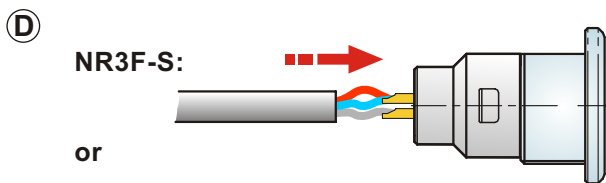

Contact Arrangement

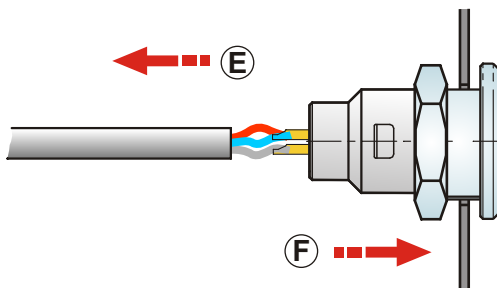

NEUTRIK AG	LI	T: +423 / 237 24 24	F: +423/232 53 93	NEUTRIK France	FR	T: +33 1/4131 6750	F: +33 1/4131 0511
NEUTRIK USA Inc.	USA	T: +1 704 / 972 3050	F: +1 704/438 9202	NEUTRIK Tokyo Ltd.	JP	T: +81 3/3663 4733	F: +81 3/3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983/811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852/2687 6055	F: +852/2687 6052
NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131/280 830	NEUTRIK India Pvt. Ltd.	IND	T: +91/982 05 43 424	F: +91/22 26163 540

Draft. Nr.: BDA 406 | Update: 17.03.2014 | Data subject to change without prior notice. ©2014 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.