



CLEANING INSTRUCTION

opticalCON® HYBRID MED Cable & Chassis Connector




CAUTION:

Laser radiation, do not look directly into beam of light!

Tools:

Dust remover (Air in a can)
Dry Cleaner PRIZM* MTP* P/N: 1689

Cable Connector Cleaning

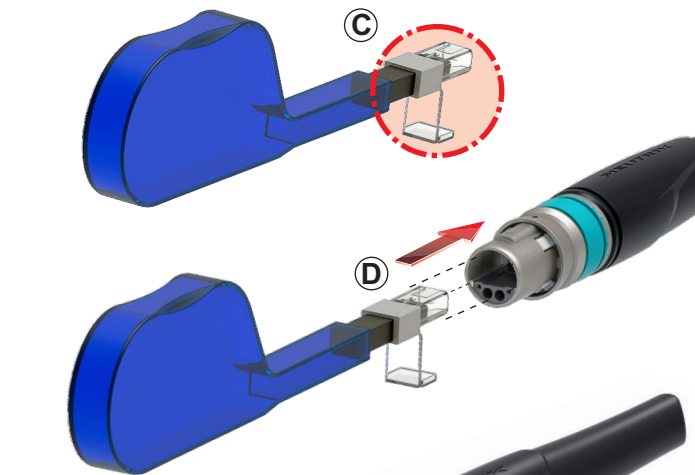

**Disconnect both cable ends for safety reasons.
Do not stare into beams or view directly with
optical instruments.**

A Remove the protection cap.

Small contamination:

B Use the dust remover to apply air to the lenses.

Heavy contamination:

C Open the protective cap of the dry cleaner and insert the tip into the connector.


D Push the main body to initiate the cleaning of the connector endface.

! Repeat the cleaning process if necessary, then close the protective cap.



Chassis Connector Cleaning

A

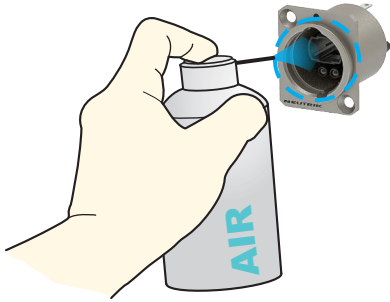

Small contamination:

- A** Use the dust remover to apply air to the lenses.

Heavy contamination:

- B** Remove the transparent adapter from the dry cleaner and insert the tip into the chassis. Push the main body to initiate the cleaning of the connector endface.

- !** Repeat the cleaning process if necessary.

B

